

AKAI


MANUAL DE UTILIZARE

RADIO CU CEAS AR 150D



DESCRIERE

1. Programare rapida
2. Programare lenta
3. Alarma/ oprire programare
4. Comutator AM-FM
5. Comutator AL 1/AL 1+ 2/AL 2
6. Comutator AUTO-OFF-ON
7. Volum/Buton oprire
8. Programare alarma
9. Programare ceas
10. Programare sleep(timp adormire)
11. Programare Sonerie (SNOOZE)
12. Indicator Cautare posturi
13. Afisaj
14. Buton Cautare posturi
15. Difuzor

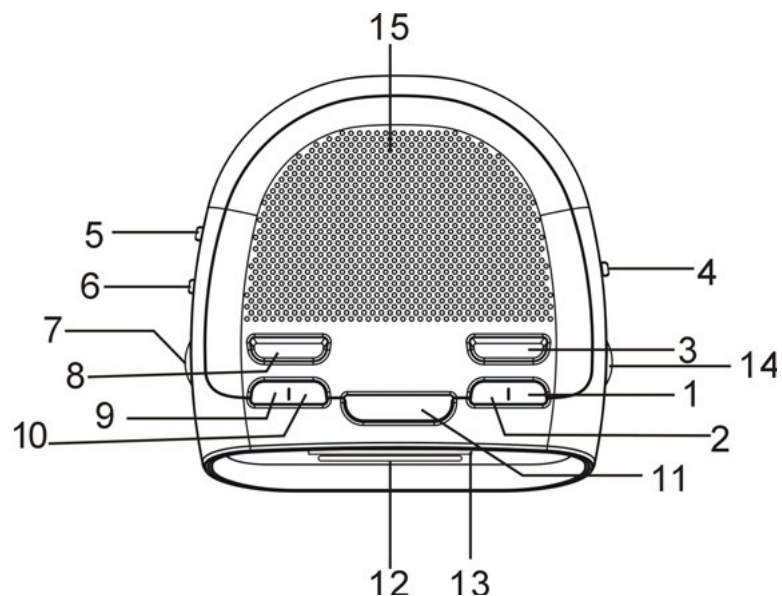

Functionarea corecta a aparatului poate fi distorsionata de interferentele campurilor electromagnetice puternice. Daca se intampla, resetati aparatul urmand instructiunile acestui manual .In cazul in care nu se poate elimina in acest mod, mutate locatia aparatului.

CONECTAREA RADIO

Cuplati cablul de retea la priza.La intreruperea retelei si repornirea acesteia afisajul va palpai.Verificati ca ati programat din nou corect ceasul si timpul de alarma .

PROGRAMAREA CEASULUI

Apasati si mentineti apasat butonul Programare ceas(9) si apasati butonul programare lenta(2) sau rapida (1) pentru a programa ceasul corect.

Apasand Programare rapida (1) timpul se va modifica mai rapid,apasand Programare lenta (2)timpul se modifica mai lent. Lasati libere butoanele de programare la sfarsitul operatiei .

FOLOSIREA RADIOULUI

Mutati comutatorul “AUTO-OFF-ON” (8) pe pozitia ON si porniti volumul.Mutati comutatorul “AM-FM” pe pozitia AM sau FM .Actionati butonul de cautare posturi (14) si Volum/Off (7) pentru a programa frecventa doirta si nivelul dorit.

ADORMIND PE MUZICA

Mutati comutatorul “AUTO-ON-OFF” (6) fie pe “OFF” fie pe “AUTO”.Apasati butonul SLEEP(10) o data .Radio va mai functiona inca 59 minute inainte de oprire.Pentru a modifica acest timp apasati si mentineti apasat butonul SLEEP(10) si simultan apasati Programare rapida(1) sau Programare lenta(2) pentru a programa perioada doirta pentru Sleep.Daca doriti oprirea aparatului inainte de expirarea timpului programat pentru Sleep apasati o data butonul Programare Sonerie (11).

PROGRAMAREA TIMPULUI DE ALARMA

Programarea AL 1 sau AL 2 : Mutati comutatorul AUTO-OFF-ON(6) pe pozitia “AUTO”.Mutati comutatorul “AL1/AL1+2/AL2 (5) pe pozitia “AL 1” sau “AL 2”.Tineti apasat butonul Programare alarma si simultan apasati butonul Programare lenta (2) sau Programare Rapida (1) pentru fixarea timpului.

Programarea ALARMEI DOUBLE: Repetati procedura de mai sus (programarea AL1 sau AL2) pentru a programa timpul pentru ALARM 1 si ALARM 2,apoi mutate comutatorul “AL1/AL1+2/AL2 (5) pe pozitia “AL1+2”.Apasati Programare Alarma (8) pentru a afisa timpul ALARM 2.

TREZIREA PE MUZICA

1. Mutati comutatorul Functii (6) pe pozitia “ON”(pornit) .Fixati comutatorul “AM-FM” pe pozitia “AM”sau “FM”.Reglati butonul de cautare posturi (14) si volum(7) pe frecventa dorita si niveleul dorit.
2. Programati timul de alarma ca mai sus.
3. Radioul va porni automat l timpul programat.

TREZIREA PE SONERIE

1. Programati timpul de alarma ca mai sus.
2. Opriti volumul si veti fi trezit numai cu Soneria.

FOLOSIREA SONERIEI

Cand alarama este pornita ,apasati butonul programare SNOOZE (11) o data .Dupa 7 minute alarma va suna din nou.

OPRIREA ALARMEI

Apasati butonul ALARM/OFF(3) o data pentru a opri alarma si aceasta va porni dupa 24 ore(o zi).Pentru a opri alarma complet ,mutate comutatorul Functii (6) pe pozitia “OFF”.

ADORMIND SI TREZINDU-NE PE MUZICA.

Repetati pasii de mai sus "TREZIREA PE MUZICA". Apasati butonul Programare SLEEP(10) pentru perioada de timp de adormire dorita. Dupa aceasta perioada radio se va opri automat si va porni din nou la timpul de trezire programat.

BATERIA DE SIGURANTA

Aparatul are posibilitatea cuplarii unei baterii de siguranta care sa asigure functionarea in cazul caderii tensiunii de retea. Introduceti o baterie de 9V si circuitul ceasului si timpul de alarma va continua sa fie alimentat.

IMPORTANT.

- nu aruncati bateriile uzate in foc
- nu expuneti aparatul la umezeala sau ploaie
- asigurati o distanta minima libera de 5cm in jurul aparatului pentru suficienta ventilatie.
- verificati ca nu ati obturat ventilatia aparatului prin acoperirea gaurilor de ventilare cu ziare ,haine ,etc.
- nu asezati langa aparat nici un obiect capabil de flacara deschisa ca: lumanari, brichete, etc.
- aveti grija la aspectele de mediu pentru baterii,
- folositi aparatul numai in climat moderat (nu in cel tropical)
- eticheta este asezata pe partea de jos a aparatului.
- Cablul de retea este folosit pentru deconectarea aparatului ,dar acesta ramane in stare de asteptare. Pentru deconectare completa cablul trebuie decuplat de la retea.
- bateria nu trebuie expusa la incalzire puternica ca direct lumina soarelui ,foc ,etc.
- nu asezati vase cu lichide deasupra aparatului,

Acest aparat este construit in concordanta cu standardele internationale de siguranta si compatibilitate electromagnetica (CE si EMC)

Reciclarea echipamentelor electrice si electronice uzate

Acest simbol prezent pe produs sau pe ambalaj semnifica faptul ca produsul respectiv nu trebuie tratat ca un deșeu menajer obișnuit. Nu aruncati aparatul la gunoiera menajera la sfarsitul duratei de functionare ,ci duceti-l la un centru de colectare autorizat pentru reciclare .In acest fel veti ajuta la protejarea mediului inconjurator si veti putea evita eventualele consecinte negative pe care le-ar avea asupra mediului si sanatatii umane.

Pentru a afla adresa celui mai apropiat centru de colectare :

- Contactati autoritatile locale ;
- Accesati pagina de internet :www.mmediu.ro
- Solicitati informatii suplimentare de la magazinul de unde ati achizitionat produsul



AKAI

CLOCK RADIO




AR150D

Gebruiksaanwijzing..... 1-3
Mode d'emploi..... 4-5
Instruction manual..... 6-7

USER GUIDE

DESCRIPTION

1. FAST SET
2. SLOW SET
3. ALARM/OFF SET
4. AM-FM SWITCH
5. AL1/AL1+2/AL2 SWITCH
6. AUTO-OFF-ON SWITCH
7. VOLUME/OFF KNOB
8. ALARM SET
9. TIME SET
10. SLEEP SET
11. SNOOZE SET
12. DIAL POINTER
13. DISPLAY
14. TUNING KNOB
15. SPEAKER

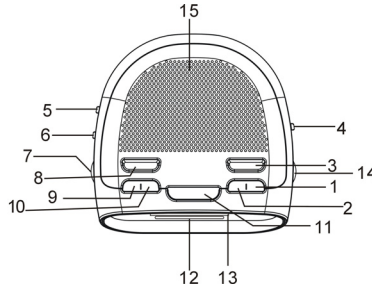

THE NORMAL FUNCTION OF THE PRODUCT MAYBE DISTURBED BY STRONG ELECTRO MAGNETIC INTERFERENCE. IF SO, SIMPLY RESET THE PRODUCT TO RESUME NORMAL OPERATION BY FOLLOWING THE INSTRUCTION MANUAL. IN CASE THE FUNCTION COULD NOT RESUME, PLEASE USE THE PRODUCT IN OTHER LOCATION.

CONNECTING THE RADIO

PLUG THE AC CORD INTO THE POWER OUTLET. WHEN ELECTRICAL POWER HAS BEEN INTERRUPTED AND RESTORED, THE CLOCK DISPLAY WILL BLINK. MAKE SURE TO RESET BOTH THE CORRECT TIME AND ALARM TIME FOR PROPER OPERATION. THE AC MAINS PLUG IS USED AS THE DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.

TIME SETTING

PRESS AND HOLD THE TIME SET (9). KEEP PRESSING THE SLOW SET (2) OR FAST SET (1) TO SET THE CLOCK DISPLAY TO THE CORRECT TIME.

PRESS FAST SET (1) THE TIME WILL ADVANCE FAST FORWARD. PRESS THE SLOW SET (2) THE TIME WILL ADVANCE SLOWLY. RELEASE THE FAST SET (1) OR SLOW SET (2) WHEN FINISHED THE SETTING.

RADIO OPERATION

SLIDE THE "AUTO-OFF-ON" SWITCH (6) TO "ON" AND TURN ON THE VOLUME. SLIDE THE "AM-FM" SWITCH (4) TO "AM" OR "FM" POSITION. ADJUST TUNING KNOB (14) AND VOLUME/OFF (7) FOR THE DESIRED FREQUENCY AND LISTENING LEVEL.

SLEEP TO MUSIC

SLIDE THE "AUTO-OFF-ON" (6) TO EITHER "OFF" OR "AUTO". PRESS THE SLEEP SET (10) ONCE. YOU CAN HAVE 59 MINUTES PLAYING THE RADIO TO ACCOMPANY YOU TO SLEEP. SET FOR A DESIRED PERIOD OF SLEEP, SIMPLY PRESS AND HOLD SLEEP SET (10) AND THEN PRESS FAST SET (1) OR SLOW SET (2) TO SET THE DESIRED PERIOD OF THE SLEEP FUNCTION. IF YOU WANT TO TURN OFF THE RADIO BEFORE SLEEP TIME HAS EXPIRED, PRESS SNOOZE SET (11) ONCE.

ALARM TIME SETTING

AL1 OR AL2 SETTING: SLIDE THE AUTO-OFF-ON SWITCH (6) TO "AUTO" POSITION. SLIDE THE "AL1/AL1+2/AL2" SWITCH (5) TO "AL1" POSITION OR "AL2" POSITION. KEEP PRESSING THE ALARM SET, AND THEN PRESS THE SLOW SET (2) OR FAST SET (1) TO SET THE ALARM TIME.

DUAL ALARM SETTING: REPEAT THE ABOVE STEPS (**AL1 OR AL2 SETTING**) TO SET THE ALARM 1 TIME AND ALARM 2 TIME, THEN SLIDE THE "AL1/AL1+2/AL2" SWITCH (5) TO "AL1+2" POSITION. PRESS ALARM SET (8) THE DISPLAY WILL SHOW THE ALARM 2 TIME.

WAKE TO MUSIC

1. SLIDE THE FUNCTION SWITCH (6) TO "ON" POSITION. SET THE "AM-FM" SWITCH TO "AM" OR "FM" POSITION. ADJUST THE TUNING KNOB (14) AND VOLUME KNOB (7) TO A DESIRED FREQUENCY AND LISTENING LEVEL.
2. SET THE ALARM TIME AS SHOWN ABOVE.
3. THE RADIO WILL PLAY AUTOMATICALLY AT THE PRESET TIME.

WAKE TO BUZZER ALARM

1. SET THE ALARM TIME AS SHOWN ABOVE.
2. TURN OFF THE VOLUME. YOU WILL BE AWAKENED BY THE BUZZER ALARM.

SNOOZE OPERATION

WHEN THE ALARM IS ON, PRESS SNOOZE SET (11) ONCE. AFTER 7 MINUTES, THE ALARM WILL BE ON AGAIN.

TURN THE ALARM OFF

PRESS ALARM/OFF SET (3) ONCE TO STOP THE ALARM AND ALARM WILL RESUME IN 24 HOURS (THE OTHER DAY). TO STOP THE ALARM COMPLETELY, SLIDE THE FUNCTION SWITCH (6) TO "OFF" POSITION.

TO GO TO SLEEP AND WAKE TO MUSIC

REPEAT THE STEPS OF "WAKE TO MUSIC". PRESS SLEEP SET (10) TO SET FOR A DESIRED PERIOD OF RADIO PLAYING BEFORE SLEEP. THE RADIO WILL STOP AUTOMATICALLY AND WILL START AGAIN AT THE PRESET WAKE UP TIME.

BATTERY BACKUP

THIS CLOCK HAS A BACKUP POWER SYSTEM TO ENSURE CONTINUOUS OPERATION DURING POWER FAILURE. INSERT ONE 9-VOLT BATTERY AND THE CLOCK MECHANISM WILL CONTINUE TO MAINTAIN THE CURRENT TIME AND ALARM PROGRAM.

DRIPPING & VENTILATION WARNING

THE PRODUCT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE PRODUCT. THE NORMAL VENTILATION OF THE PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE.

**Disposal of Used Electrical & Electronic Equipment**

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Importer AKAI Benelux – Elmarc B.V.
Information : www.akai.eu

Power consumption: 5W (wattage: Back up 9V)
Standby power consumption: 1W

Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.