

AKAI

Operator's manual

DUAL ALARM CLOCK RADIO **AR-F360D**


AKAI
AKAI ELECTRIC CO., LTD.
JAPAN



Operator's manual	(GB) 2~3
Gebruiksaanwijzing	(NL) 4~5
Manual de l'utilisateur	(F) 6~7
Manuale di istruzioni	(I) 8~9
Bedienungsanleitung	(D) 10~11

GB

Digital Dual Alarm Clock Radio

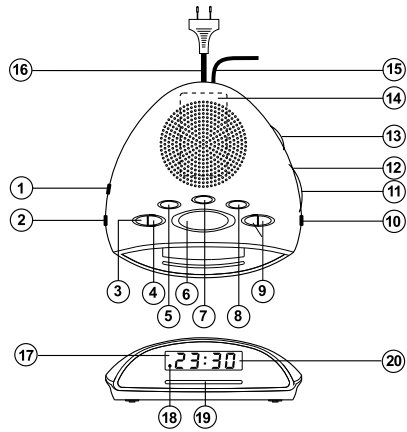

LOCATION OF CONTROLS

1. Alarm Selector
2. Alarm Mode
3. Radio On
4. Stop : to switch off Alarm, Sleep, Radio
5. Sleep : On / set
6. Snooze : alarm repetition
7. Time : set
8. Alarm : set
9. Setting knobs : Slow ► Fast ►►
10. Band Selector : FM / AM
11. Dimmer : Low / High
12. Tuning Knob
13. Volume Knob
14. Battery back-up compartment
15. FM wire antenna
16. AC Power cord
17. Digital display
18. Alarm 1 LED indicator
19. Dial scale and pointer
20. Alarm 2 LED indicator

POWER SUPPLY

AC power: 230V ~ 50 Hz (CE standard)

DC power: 9V battery type 006P (not provided) for clock back-up system only.

An alkaline type battery is recommended. For optimum performance, this battery should be replaced every 6 months.

1. Insert the AC power cord (16) into a convenient standard AC wall outlet.

2. Connect the 9V battery inside the compartment at the bottom of the unit (14).

BACK-UP SYSTEM: Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink **00:00** to indicate that you have to redo the time and alarm settings.

Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

SETTING THE TIME

1. Press and hold TIME (7) and press ► or ►► (9) to adjust to your desired time.
2. Release TIME (7) to store your setting in memory.

LISTENING TO THE RADIO

1. Switch to FM or AM position with the Band selector (10).
2. For a better reception in FM, extend the antenna (15). In AM rotate the unit.
3. Press Radio ON (3).
4. Adjust the volume (13) to the desired level.
5. Select your desired radio station (12) and (19).
6. To stop listening to the radio, press STOP (4).

GB-2

SETTING THE ALARM AND WAKE-UP MODE

This unit allows you to set two different wake up times which you can choose to use independently or simultaneously. AL 1 or AL 2, or AL 1 and 2.

AL 1 - Switch (1) to AL 1 position. Press and hold the ALARM (8), and press ► or ►► (9) to adjust your desired alarm time, then release ALARM (8) to store your setting in memory.

AL 2 - Switch (1) to AL 2 position and redo the same operation as above.

Select your wake-up mode (2) in AUTO (for RADIO), BUZZER (for alarm sound) or OFF to switch off the alarm.

WAKE UP TO THE RADIO

1. Follow the procedure in "LISTENING TO THE RADIO", to select your desired radio station.
2. Select the AUTO position (2). The Alarm indicator will alight (18 and / or 20).
3. Switch (1) to either AL 1, AL 2, or AL 1 + 2.

STOPPING THE ALARM

The alarm is programmed to run for 59 min.

1. SNOOZE (6) : Press to stop the alarm temporarily, the alarm will ring again in 7 min.
2. STOP (4) : The alarm will stop, and will sound again 24 hours later.
3. OFF (2) : Turns off alarm permanently, alarm indicator will go off (18 and / or 20).

SLEEP TO MUSIC

Select FM or AM (10) then press SLEEP (5), the sound will come on for 59 min. To change this sleep time, press and hold SLEEP (5), and use ► or ►► (9) to adjust to the desired time. To turn off the music earlier, press STOP (4).

SPECIFICATION

Power consumption 4W

Standby power consumption 2.2W

MORE INFORMATION

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT

- Do not throw batteries in fire !

- The apparatus shall not be exposed to dripping or splashing.

- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.

- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths curtains, etc..

- Do not place naked flame sources, such as lighted candles on the apparatus.

- Take attention to the environmental aspects of battery disposal.

- Use the apparatus only in moderate climates (not in tropical climates).

- Do not place objects filled with liquids, such as vases, on the apparatus.

- The marking plate is located on the bottom enclosure.

- Mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnected the power input, the mains plug of the apparatus shall be disconnected from the mains completely. The mains plug should not be obstructed or should be easily accessed during intended use.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

- Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

This unit conforms to the international safety specifications , and also complies with current standards concerning electrical safety and electromagnetic compatibility EMC.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

**For more information and warranty conditions,
please visit : www.akai.eu**

GB-3

